

# KH02 Display Controller



\* Please read this manual carefully before using this product

USER MANUAL

[www.sysinnotec.com](http://www.sysinnotec.com)

sysinno

# PACKAGE CONTENTS

- KH02 main unit
- Adapter [1]



# PRODUCT DESIGN / FEATURES



## NOTES:

- [1] Power cable length: 1.5m.
- [2] Use Mini HDMI or Mini HDMI to HDMI adapter.
- [3] RS485 wire: AWG22, max 200m.
- [4] Only compatible with iAeris air quality detector.

## Communication Interface:

### RS485 Function

- RS-485 is directional; ensure correct A (+) and B (-) connections.

### Wireless Network Function


- Refer to the WiFi setup instructions for wireless network use.

# SYSTEM ARCHITECTURE

**iAeris**  
Target iAeris  
Air Quality Detector

**KH02**  
Screen Controller

Screen Display

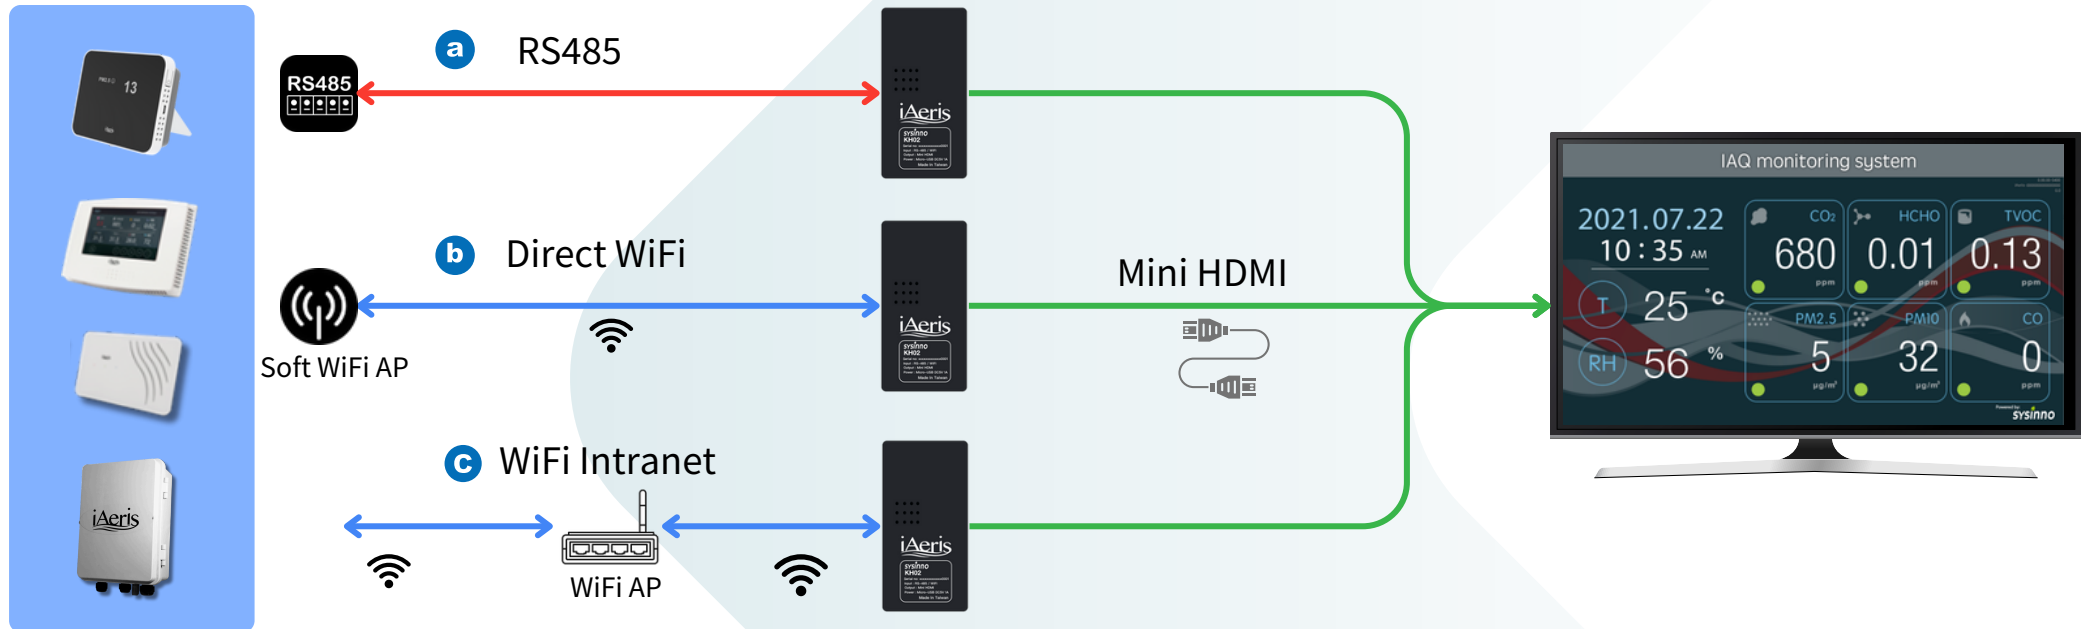


## NOTES:

- [1] KH02 connects with iAeris air quality detectors to display data on an external screen.
- [2] KH02 supports only one iAeris detector at a time.
- [3] KH02 connection method with iAeris:
  - a** RS485: Connect via RS485 cable.
  - b** Direct WiFi: Enable iAeris WiFi hotspot mode and connect KH02 to it.
  - c** WiFi Intranet: Connect both iAeris and KH02 to the same local network via WiFi.
- [4] No external screen or WiFi AP included. Resolution: 1920x1080.


# RS485 INSTALLATION GUIDE

Connect iAeris and KH02 via RS485

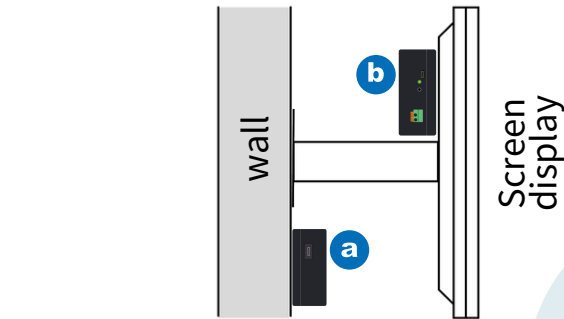

1.

Installation: KH02 can be **a** stuck on the wall or **b** placed behind the screen.

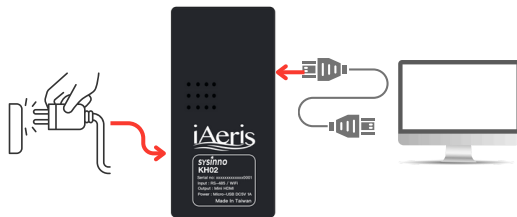

3.


Insert HDMI into KH02 and plug in the adapter.

Target iAeris  
Air Quality Detector



RS485

KH02

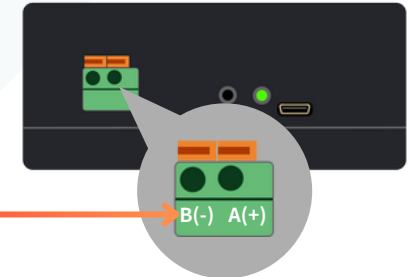

2.

Connect to iAeris via RS-485 transmission cable. [1]

[1]: RS-485 is directional; ensure correct A (+) and B (-) connections.



4.

When the air quality screen appears, monitoring begins.

# DIRECT WIFI INSTALLATION GUIDE

## Connect iAeris and KH02 via Direct WiFi




**1** Installation: KH02 can be **a** stuck on the wall or **b** placed behind the screen.


Target iAeris  
Air Quality Detector



**2** Enable iAeris WiFi hotspot. [1]  
[1]: iAeris WiFi hotspot is enabled by default. If unsure, reset network settings using the iAeris manual.

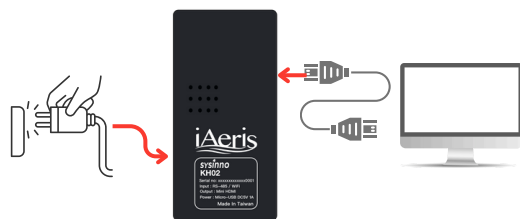

**3** Insert HDMI into KH02 and plug in the adapter.

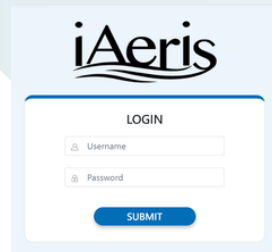

**4** Log in to KH02 to set up WiFi.[2]  
[2]:Please refer to [Direct WiFi Installation Guide] Section




**5** When the air quality screen appears, monitoring begins.




# WiFi INTRANET INSTALLATION GUIDE


## Connect iAeris and KH02 via WiFi Intranet

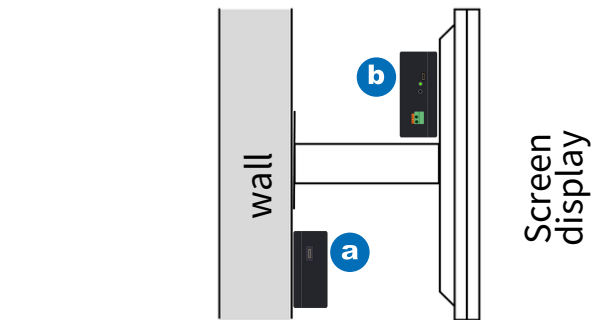


**1.** Installation: KH02 can be **a** stuck on the wall or **b** placed behind the screen.

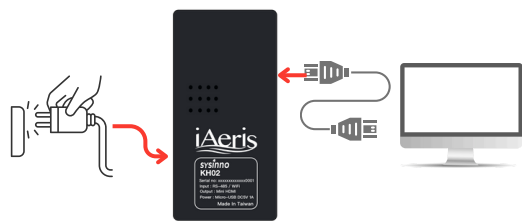

**3.** Insert HDMI into KH02 and plug in the adapter.

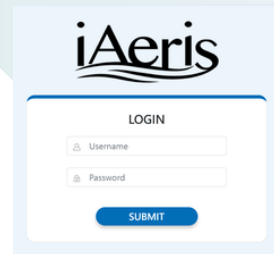

**4.** Log in to KH02 to set up WiFi. [2]  
[2]: Please refer to [Direct WiFi Installation Guide] Section

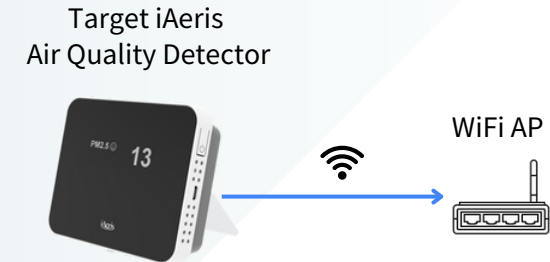

**2.** Connect iAeris to the network with a fixed IP [1]  
[1]: iAeris WiFi hotspot is enabled by default. If unsure, reset network settings using the iAeris manual.



**5.** When the air quality screen appears, monitoring begins.



# CONNECT TO WIFI HOTSPOT

KH02 hotspot is on by default; connect via phone or computer

1.

Power on KH02, then press the multi-function button after boot-up.



The screen shows device info; ensure KH02 is in hotspot mode (AP mode)[1]



2.



Connect to KH02 WiFi hotspot on your device.



Find WiFi hotspot and key on the side label.

SSID: KH02\_XXXX

 Password 1234567890

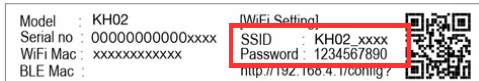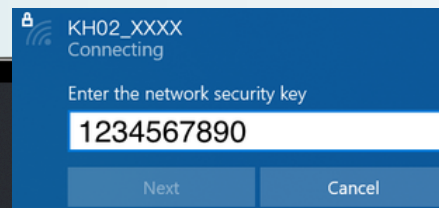

## NOTES:

[1] Press the multi-function button for 10 seconds if KH02 WiFi hotspot is not found.



Restart to enter setup mode and automatically enable WiFi hotspot.

# LOG IN TO THE SETUP WEBPAGE


KH02 supports remote setup via computer or phone when connected to the network

1.

Power on KH02 and press the multi-function button. [1]




The screen displays KH02 connection info and IP address. [2]

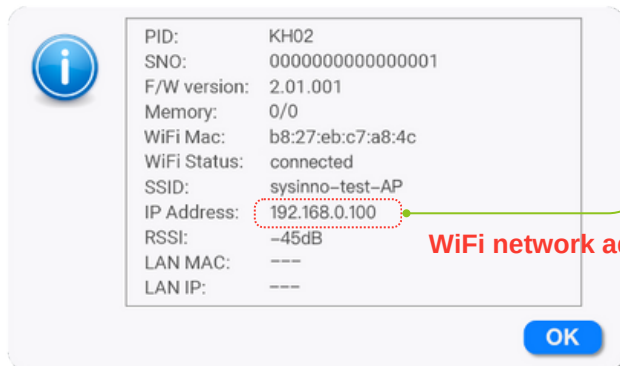

WiFi network address

2.

Use a browser on your computer or phone and enter the URL 「http://xx.xx.xx.xx」 [3] Access the setup page.

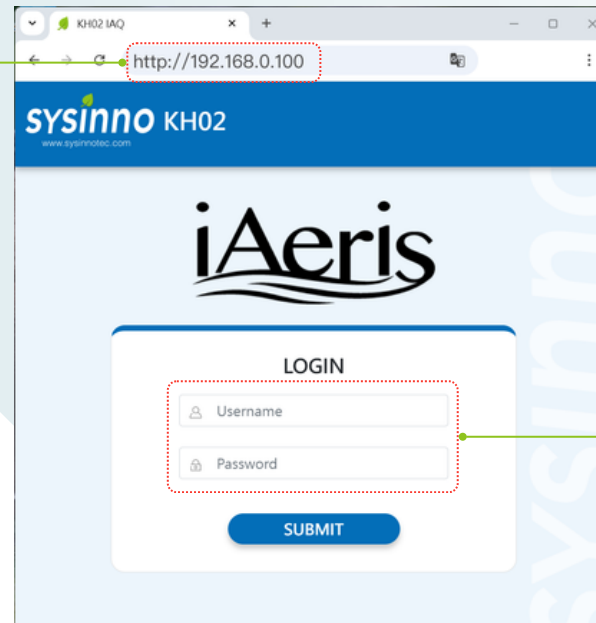

3.

Enter the username and password to log in: Default factory settings.

username: admin

password: admin

## NOTES:

[1] If it's your first time, KH02 will be in setup mode with WiFi hotspot enabled. Connect to the KH02 WiFi hotspot.

[2] The connection info shows both WiFi and Ethernet IP addresses. Choose based on your connection.

[3] 「http://xx.xx.xx.xx」 is just an example. Users must enter the actual IP address.



# DIRECT WIFI MODE CONNECTION SETUP

Log in, then click "Network" > "Wireless Network" to access settings

1. Enable the "Wireless Network" feature

- Direct WiFi mode requires wireless network to be enabled.

2. Select the WiFi AP you want to connect to

- Note that the AP here refers to the iAeris WiFi hotspot, and it may vary by device.
- If KH02 cannot find the iAeris hotspot, ensure the hotspot on iAeris is enabled.

3. Enter the password

- The default password for Direct WiFi mode is "1234567890".


4. Enable the [DHCP] feature

- Enable DHCP for Direct WiFi mode.

5. Enable the [WiFi Connection] feature

- Enable wireless connection for Direct WiFi mode.
- The default IP address for Direct WiFi mode is "192.168.4.1".

6. After setting, click "Agree".

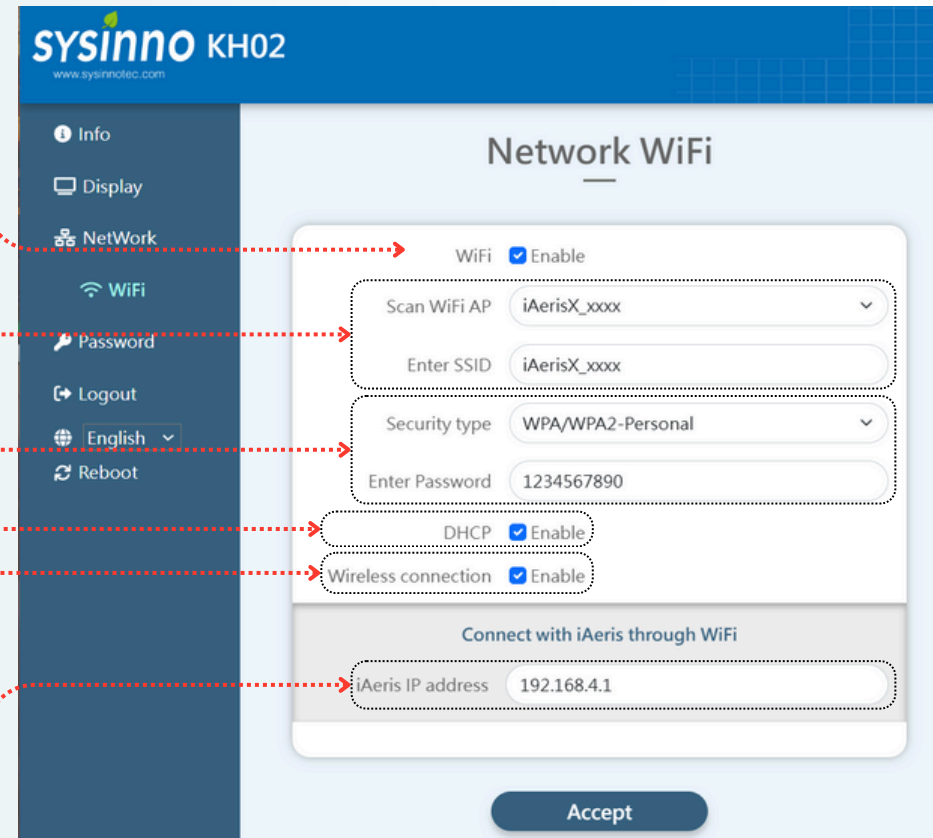

## NOTES:

- [1] For Direct WiFi mode, ensure the iAeris hotspot is enabled.
- [2] If iAeris hotspot range is insufficient, use RS485 or WiFi Intranet mode.

# WIFI INTRANET MODE CONNECTION SETUP

Log in, then click "Network" > "Wireless Network" to access settings

1. Enable the "Wireless Network" feature

- ! Wireless network must be enabled for WiFi Intranet mode.

2. Select the WiFi AP you want to connect to

- ! Note: The AP is the user's WiFi, and "sysinno-test-AP" is an example. The displayed AP may vary
- ! If KH02 can't find the user's WiFi AP, manually enter the network name.

3. Enter the password

- ! Note: The password is for the user's WiFi AP, not the KH02 hotspot password "1234567890"


4. Check the [DHCP] option

- ! Please read the description on the right for the DHCP option.

5. Enable the [WiFi Connection] feature

- ! Enter the target iAeris air quality detector's IP address.
- ! The target iAeris must have a fixed IP address to connect correctly.

6. After setting, click "Agree"

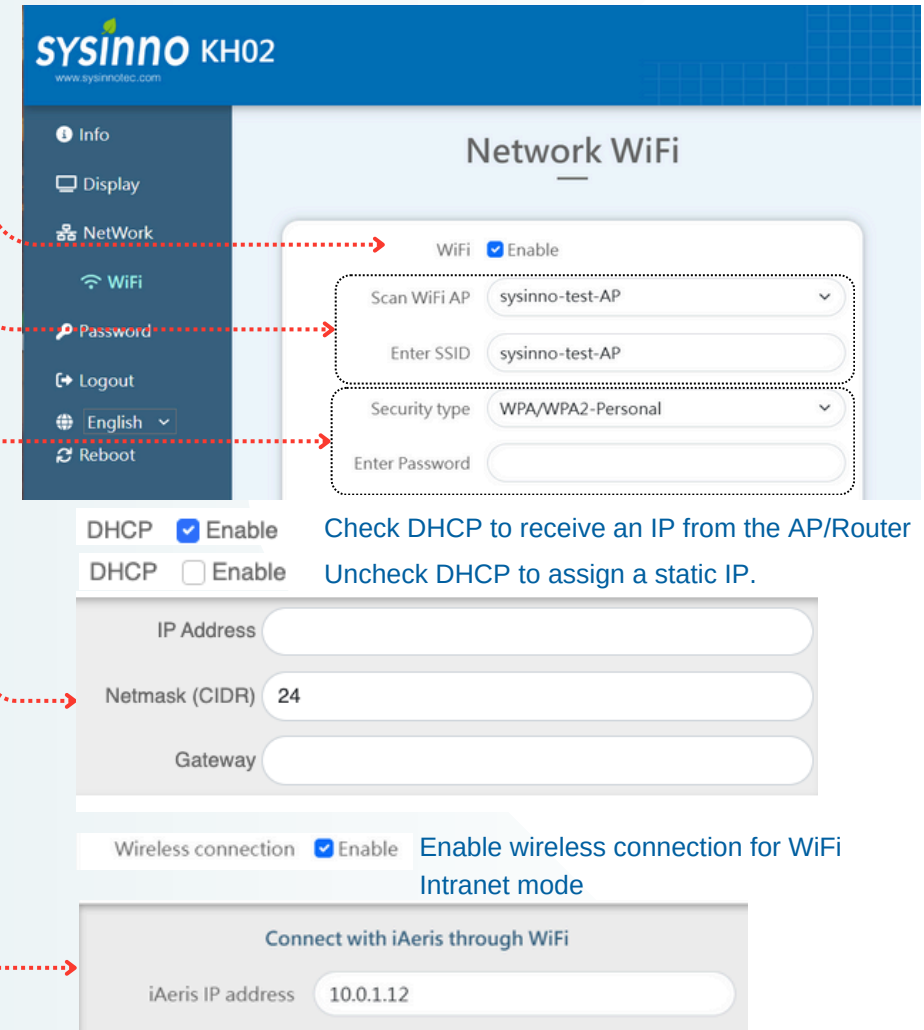

## NOTES:

- [1] Ensure the target iAeris has a fixed IP before using WiFi Intranet mode.
- [2] For iAeris network setup, refer to the iAeris product manual.

# DISPLAY TEMPLATE SETTINGS


## Display Settings

1. Click "Display" in the menu to access the display settings page.
2. Select template [1], language, date format, and time format.
3. For customization, use your own images for the logo, title, and background.
4. Check the "History Curve" option to enable the display of factor history.
5. Default factors are based on iAeris. Check "Custom Factors" to modify.
6. Click "Save" to apply settings, then restart the device.


### NOTES:

[1]KH02 supports a simple template for selection

### Settings Page

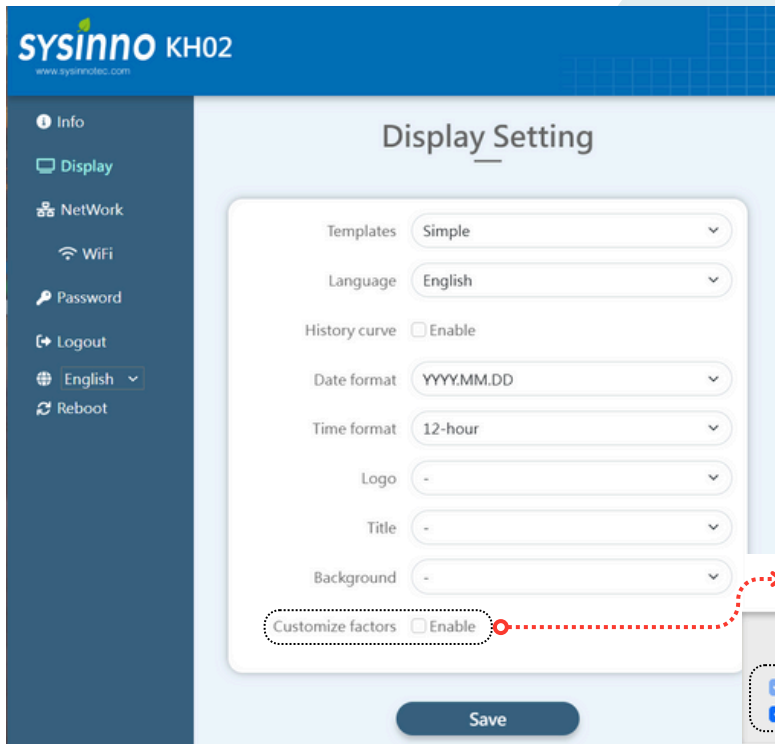


Customize factors  Enable Check "Custom Display Factors"

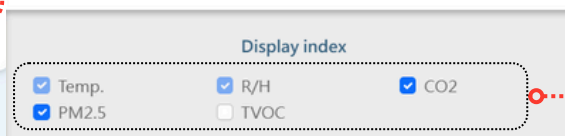

Change Display Factors

### Screen

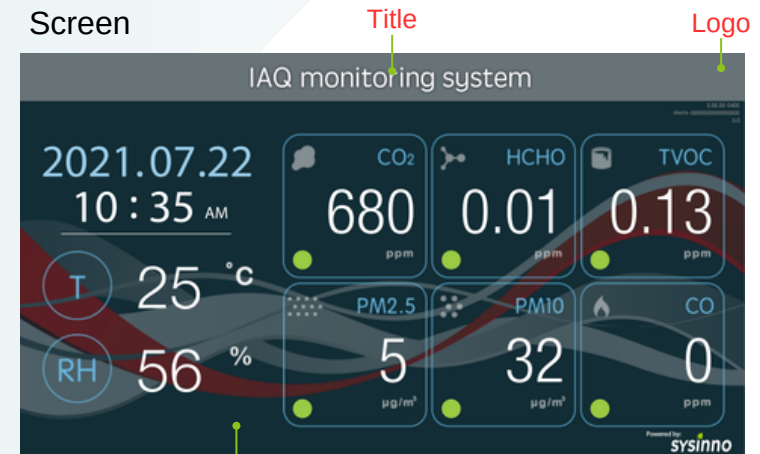


Background

# ADVANCED FEATURE SETTINGS

In addition to 'Wireless Network' and 'Display Layout' settings, this section explains many other features

## Device Information


1. Click '**Information**' in the menu to enter the Device Information page.
2. The Device Information page displays KH02 details.

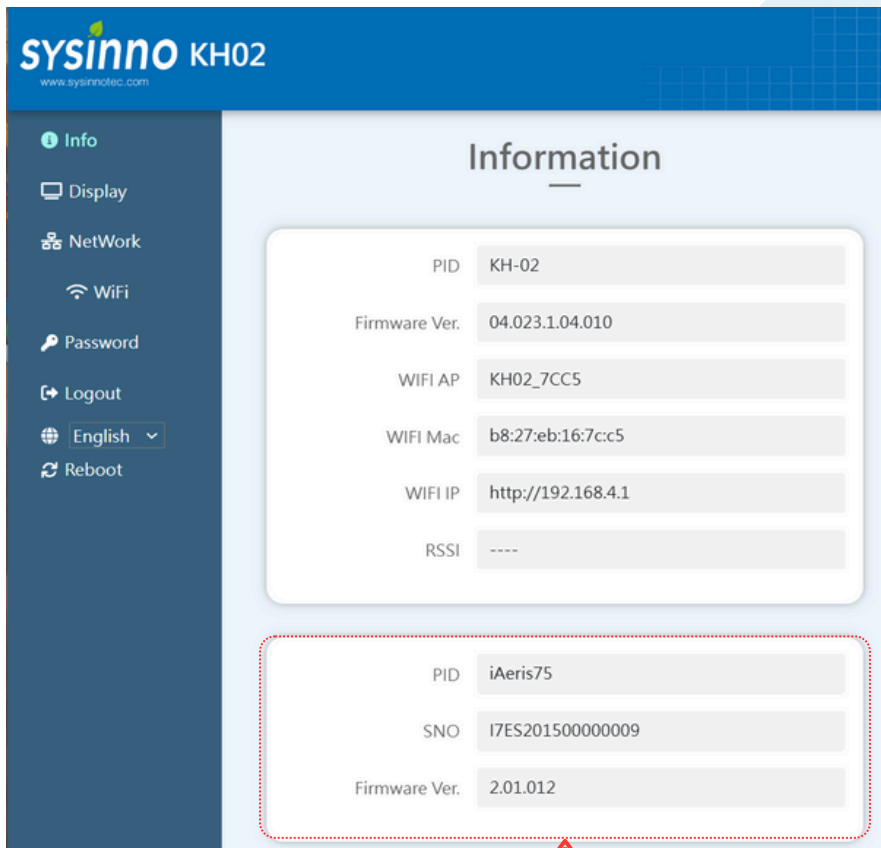

Target iAeris Information

## Change Account Password

1. Click '**Password**' in the menu to access Account settings
2. Reset User Account[1]
3. Reset User Password [2] and confirm the new password
4. Password set, you will be logged out of the settings page

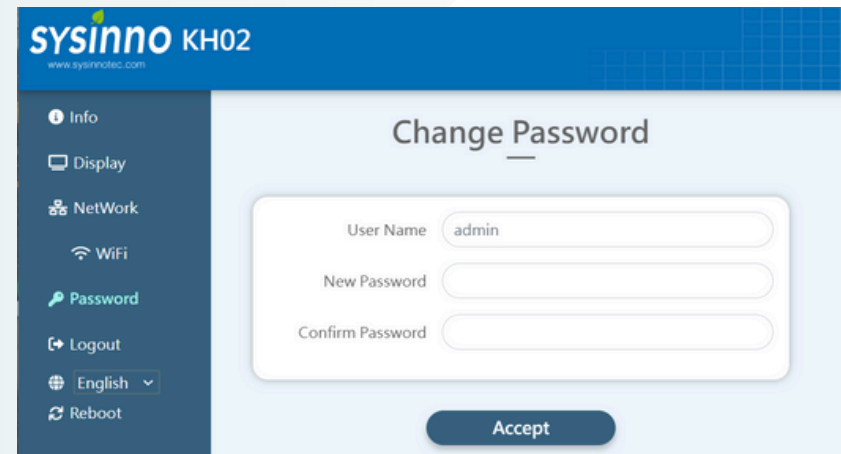

### NOTES:

[1] If you forget your account password, press and hold the multifunction button for 10 seconds to switch to the default hotspot mode and reset the login account and password

[2] The password must be at least 8 characters long

# Precautions



- This product provides general indoor air quality information only and is not intended to determine individual health impacts or serve as a fire alarm.
- Keep the product away from heat sources and areas prone to water splashes or dripping.
- Do not insert external objects into the ventilation holes to prevent sensor malfunction or electric shock.
- Non-technical personnel should not attempt to disassemble, modify, or repair the product.
- Use correct connectors and cables during installation and avoid forcing connectors into ports to prevent damage not covered by warranty.

## 【Attention】 Power Supply Notice:

This product is powered using the included power supply or external power source.

### **Power Supply Specifications:**

The included adapter outputs 5V through a Micro USB connector. Please do not modify or extend the power supply cable, as it may damage the device.

## 【Attention】

- The communication features (RS485, WiFi) of this product are specifically designed for the iAeris air quality detector. Please do not use it for other applications.
- This product uses a Mini HDMI output interface. Please use the correct cable or an adapter to convert it to an HDMI output.
- For setup and installation assistance, please contact your local distributor or sales representative for technical support.

## 【 Use the correct connectors and ports 】

- Avoid forcing connections. Check for obstructions. Ensure proper alignment.
- Damage from mishandling, like inserting wrong pins, isn't covered by warranty.

### **Prohibition of Hot Wiring**

When changing the power source or port terminals, be sure to cut off power before wiring adjustments, and reconnect power only after completing the setup.